




SensorSwitch™ Mobile App

Visible Light Programming

Quick Start Guide

The SensorSwitch™ Mobile App uses your smartphone's display or Bluetooth® wireless technology to configure settings on VLP-enabled SensorSwitch occupancy sensors, photocontrols and luminaires available with standalone embedded controls from SensorSwitch.

Set occupancy time delay, trim values, photocontrol options and more with this visually intuitive tool. Sensor customization has never been easier.

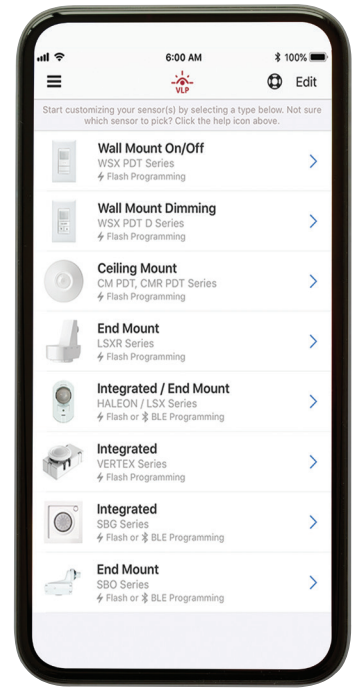


Download the App

SensorSwitch™ VLP Mobile App




Program Settings

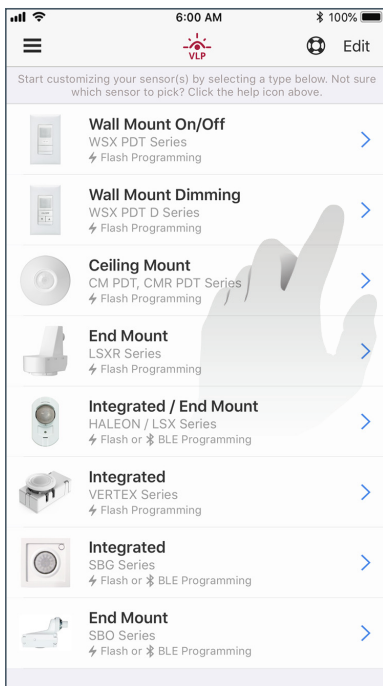


Step 1

Select Sensor.

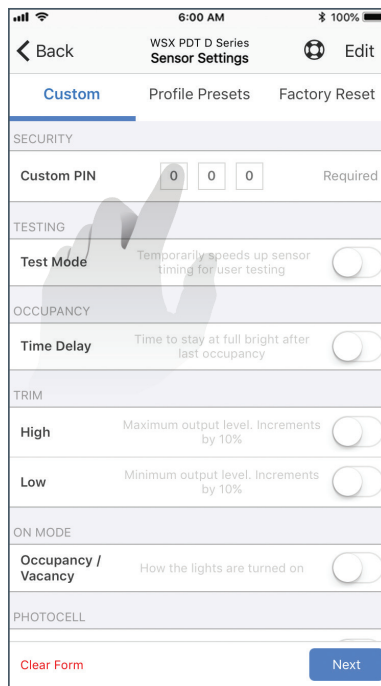

Step 2


Set or change the 3-digit PIN within 45 minutes of restored power, or after a deliberate power cycle.

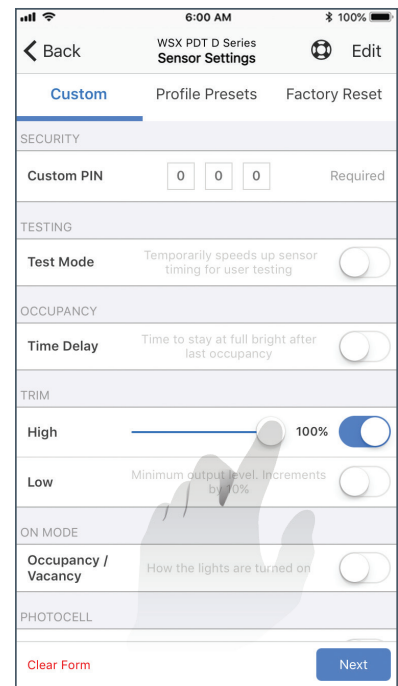

Step 3

Toggle the high trim option and slide the status bar down to 40%. Select the Next button.

Program Settings

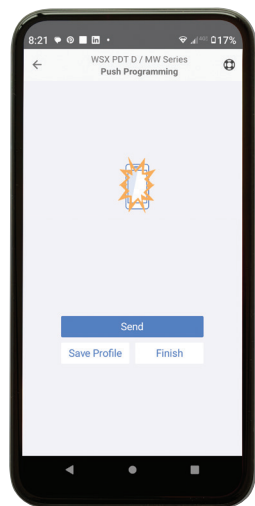

Range 6-12 Inches

Step 4

Press send as shown above to initiate the 3-second countdown timer. Within the 3-second time window, flip the phone over and aim display towards the sensor within 6-12 inches.

Step 5

The mobile display will flash a series of pulses, which will illuminate onto the sensor. Do not cover the display. The camera flash will pulse once to indicate programming complete. Please see below feedback codes highlighting programming acceptance.

Feedback Codes

Room Lights	LED	Meaning
	Blink-Blink	Successfully set PIN and/or configuration option.
	Rapid Blink	Correct PIN, configuration not modified.
	Rapid Blink	Incorrect PIN, VLP enabled
	No Blink	Not VLP enabled

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Acuity Brands is under license. Other trademarks and trade names are those of their respective owners.