

# INSTALLATION GUIDE FOR ARV17/YRV17 LED

---

## **SAFETY PRECAUTIONS**

**WARNING - Risk of fire or electric shock. Basic safety precautions should always be followed when using electrical equipment.**

**WARNING - This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.**

**WARNING - Disconnect power to all circuits before wiring fixture.**

**WARNING - Install in accordance with all national, state, and local codes.**

**WARNING - The main (white LED) circuit and the auxiliary circuit (Nightlight) are to be wired to separate circuits that can't be powered on simultaneously.**

**WARNING - Do not connect to an ungrounded supply.**

**WARNING - Read all fixture markings and labels to ensure correct installation of fixture.**

---

**RETAIN THESE INSTRUCTION FOR FUTURE USE**



One Lithonia Way, Conyers GA 30012 | 1.800.705.SERV (7378) | [www.luminaireled.net](http://www.luminaireled.net) | © 2020 Acuity Brands Lighting, Inc. All rights reserved.

# INSTALLATION GUIDE FOR ARV17/YRV17 LED

---



CAN ICES-005 (A) / NMB-005 (A)

---

## FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## ISED CANADA STATEMENT / DECLARATION POUR ISDE CANADA

This class A lighting equipment complies with Innovation, Science and Economic Development (ISED) Canada Standard for radio interference-causing equipment ICES-005, 5th edition.

Ce matériel d'éclairage de classe A est conforme avec la norme sur le matériel brouilleur radio NMB-005, 5ième édition, publié par innovation, science et développement économique (ISDE) Canada.

---


**RETAIN THESE INSTRUCTION FOR FUTURE USE**

---




One Lithonia Way, Conyers GA 30012 | 1.800.705.SERV (7378) | [www.luminaireled.net](http://www.luminaireled.net) | © 2020 Acuity Brands Lighting, Inc. All rights reserved.

# INSTALLATION GUIDE FOR ARV17/YRV17 LED

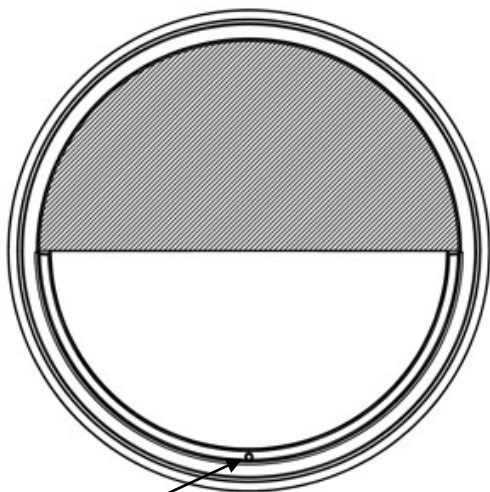

Set Screw

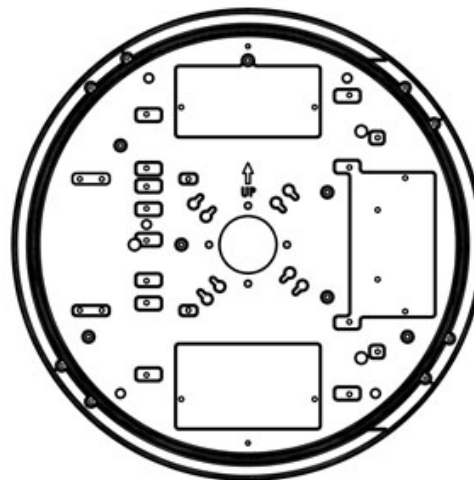

## INSTALLATION PROCEDURE

**WARNING - The main (white LED) circuit and the auxiliary circuit (Nightlight) are to be wired to separate circuits that can't be powered on simultaneously.**

1. Remove Luminaire from carton and check for damage
2. Remove tamper resistant screw at 6 o'clock position and turn ring/eyelid counter clockwise to release.
3. Remove Lens by loosening (4) 8-32 screws.
4. Set aside screws, lens, and ring/eyelid for later use.
5. Dis-connect Driver wires to LED Board Assembly. Set wire nuts aside for later use.
6. Remove LED Board Assembly by loosening (2) 8-32 hex nuts located near the raised center section of reflector.
7. Apply round gasket to back plate
8. Locate Up arrow on plate and mount plate accordingly
9. Mount fixture to surface using (4) ¼ bolts (not included). While the fixture may be mounted directly to junction box using keyhole slots provided, we recommend using the ¼ bolts for maximum vandal resistance.
10. Connect all supply wires in accordance with national and local electrical codes.
11. Re-install LED Board Assembly using (2) 8-32 nuts. Do not over tighten.
12. Connect Driver wires to LED Board Assembly using supplied wire nuts from Step 5. Connect black to blue and red to red.
13. Install lens on fixture.
14. Align outer ring/eyelid so that the screw access hole is in the five o'clock position and engages with lens.
15. Turn ring /eyelid in the clockwise direction to engage with lens.
16. Re-install tamper resistant screw at six o'clock position.
17. Energize and test.

**RETAIN THESE INSTRUCTION FOR FUTURE USE**



One Lithonia Way, Conyers GA 30012 | 1.800.705.SERV (7378) | [www.luminaireled.net](http://www.luminaireled.net) | © 2020 Acuity Brands Lighting, Inc. All rights reserved.